



ELMO DOCUMENT CAMERA

Start-Up and Operation Procedure

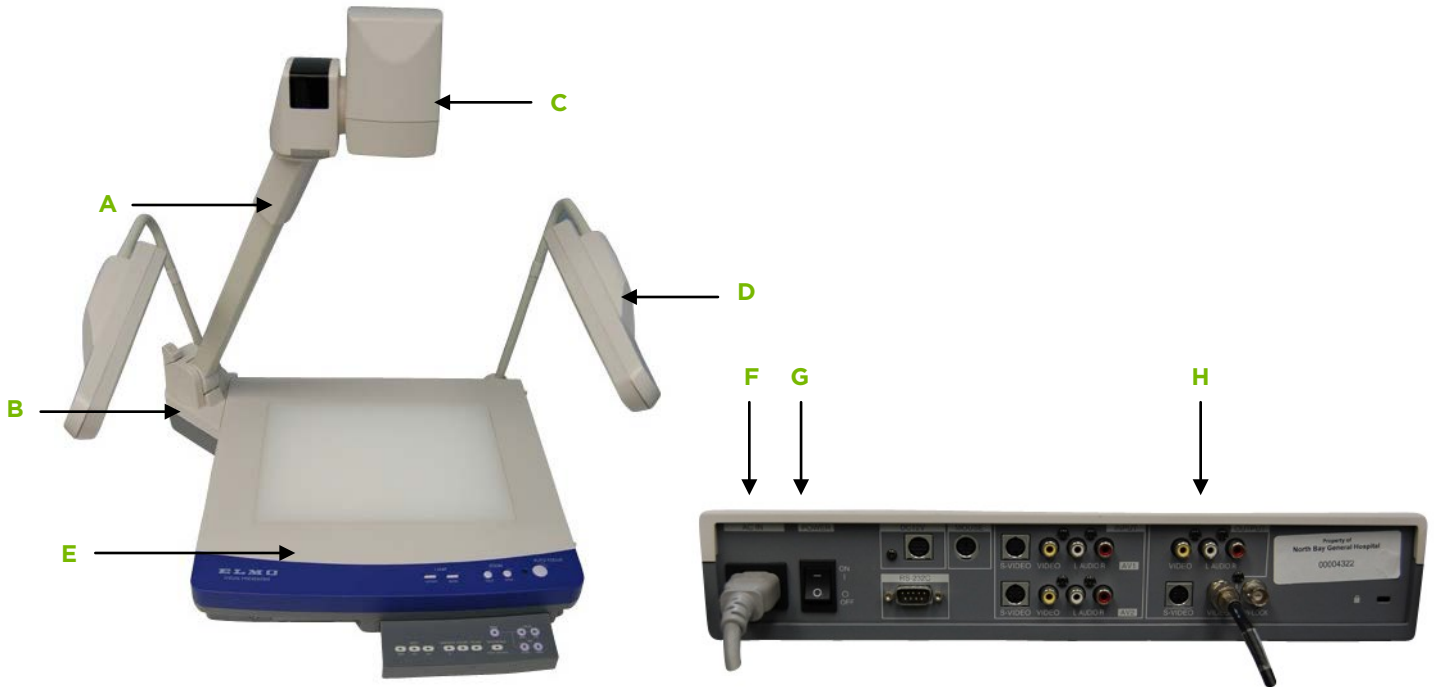

Start-up Procedure

1. If not already done, swing up the **Camera Arm (A)** using the **Unlock Button (B)**.
2. Make sure the **Camera Lens (C)** is pointing towards the **Stage (E)**.
3. If not already done, swing open both **Overhead Lights (D)**.
4. If not already done, plug in the S-Video cable into the **Output (H)**.
5. If not already done, plug in the **Power Cable (F)**.
6. Turn **POWER** switch (G) to "ON".

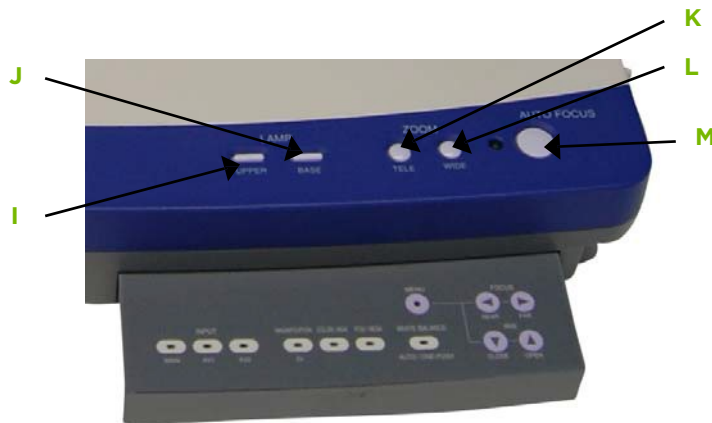

Operating Procedure

1. To turn on the Upper Lamps press the **On Button (I)**.
2. To turn on the Base Lamp, press the **On Button (J)**.
3. To zoom in press the **Tele Button (K)** and to zoom out press the **Wide Button (L)**.
4. To adjust the focus automatically, press and hold the **Auto Button (M)** for a few seconds.